# **Portable Infrared Thermometer**

# PIR - 550

Temperature : -60 to 550℃





**GASDNA Co.,Ltd** 101, Bukhang-ro 193beon-gil, Seo-gu, Incheon, 22856, Republic of Korea
Tell: +82-32-584-7420 Fax: +82-32-584-7424 E-mail: sales@gasdna.com Web: www.gasdna.com




# **PIR550 Operating Instructions**

The thermometer is a non-contact infrared thermometer. There are many mathematical modes for the Infrared function. Please remember to keep away from children and don't use it for safety related applications



# (Default Screen)

Simply aim the thermometer at the measure target with Lens (9) and press Meas. Key (7) to display the surface temperature. The Distance:Spot is 12:1. Please make sure the target area is within the field of view.

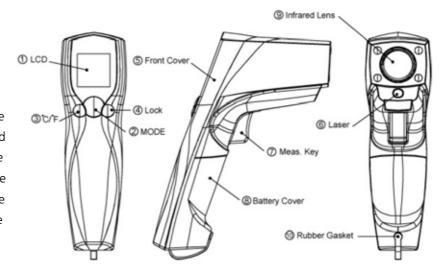

# **Function**

Press Mode key (2) for scrolling more display function as follows.



Here will show the emissivity data. (The default emissivity is 0.95)

Press Mode key (2), then press Lock key (4) or  $^{\circ}C/^{\circ}F$  key (3) to set the emissivity, then press Mode key (2) to confirm it. The emissivity can be changed from 0.10 (10E)to 1 (100E).

Press Mode key (2) for the Maximum (MAX), Minimum (MIN), Different between MAX and MIN (DIF) and Average (AVG) modes. During the measurement, the special modes reading will be displayed beside the mode icon.

Press Lock key (4) or °C / °F key (3) to change the **High Alarm (HAL)** or **Low Alarm (LAL)**, then press Meas. key (7) to confirm it. When the reading is outside the High Alarm (HAL) or Low Alarm (LAL) limit. The High or Low icon will flash and you will hear a beep sound.

# **ADD VALUE**

In E, MAX, MIN, DIF, AVG mode:	Press Lock key (4) for LOCK mode ON/OFF. The lock mode is particularly useful for	
	continuous monitoring of temperatures for up to 60 minutes.	
	Press °C / °F key (3) for °C or °F transferred	
In all modes: First hold	and press Lock key (4) for backlight function ON/OFF.	
on the Meas. key (7)	and press °C / °F key (3) for laser function ON/OFF.	
Memory	Memory Recall the last reading memory by pressing Mode key (2) while power off.	

# A CAUTION

- 1. WHEN DEVICE IS IN USE, DO NOT LOOK DIRECTLY INTO THE LASER BEAM-PERMANENT EYE DAMAGE MAY RESULT.
- 2. USE EXTREME CAUTION WHEN OPERATING THE LASER.
- 3. NEVER POINT THE DEVICE TOWARDS ANYONE'S EYES.
- 4. KEEP OUT OF REACH OF ALL CHILDREN



## **STORAGE & CLEANING**

It should be stored at room temperature. The sensor lens is the most delicate part of the thermometer. The lens should be kept clean at all times, care should be taken when cleaning the lens using only a soft cloth or cotton swab with water or medical alcohol, allowing the lens to fully dry before using the thermometer. Do not submerge any part of the thermometer.

# **LCD ERROR MESSAGES**

The thermometer incorporates visual diagnostic messages as follows:

(((LOW))

'Hi' or'Lo' is displayed when the temperature being measured is outside of theettings of HAL and LAL.

Er 2

'Er2' is displayed when the thermometer is exposed to rapid changes in the ambient tempeature. 'Er3' is displayed when the ambient temperature exceeds 0C (32°F) or +50°C (122°F). The thermometer should be allowed plenty of time (minimum 30 minutes) to stabilize to the working/room temperature.



Error 5~9, for all other error messages it is necessary to reset the thermometer. To reset it, turthe instrument off, remove the battery and wait for a minimum of one minute, reinsert the battery and turn on. If the error message remains, please contact the Service Department for further assistance

### **BATTERIES**

The thermometer incorporates visual low battery indication as follows:





滸

'Battery OK': measurements are possible

'Battery Low': battery needs to bereplaced, measurements are still possible

'Battery Exhaus ted': measurements are not possible

## **BATTERY REPLACEMENT**

- 1. Pull out the rubber gasket (10)
- 2. Loosen the screw and pull out the battery cover
- 3. Replace and reinstal with new batteries
- 4. Place the battery cover back and fasten the screw
- 5. Plug the rubber gasket (10) to avoid failure of water proof



When the 'Low Battery' icon indicates the battery is low, the battery should be replaced immediately AAA, 1.5V batteries. Please note: It is important to turn the instrument off before replacing the battery otherwise the hermometer may malfunction



Dispose of used battery promptly and keep away from children

# **SPECIFICATION**

Measurement Range	-60 to 550 °C (-76 to +1022 °F)	
Operating Range	0 ~ 50°C (32~122°F)	
Acc uracy	Measured value ±2% or ±2℃	
Emissivity	0.1 ~ 1.0 <b>d</b> efault value: 0.95)	
Response Time	1 sec	
D:S (Distance:Spo)t	12:1	
Battery Life	min 14 hours continuous use	
Dimensions	143.9 x 116.73 x 42.78mm	
Weight	180 grams (6.35 oz) including batteries (AAA*2pcs)	
Note: Under the electromagnetic field of 3V/m from 200 to 700 MHz, the maximum error is 50 (995). The thermometer will		

Note: Under the electromagnetic field of 3V/m from 200 to 700 MHz, the maximum error is  $5^{\circ}$ C ( $9^{\circ}$ F). The thermometer will automatically shut off if left idle for more than 15sec.



**EMC/RFI**: Readings may be affected if the unit is operated within radio frequency electromagnetic field strength of approximately 3 volts per meter, but the performance of the instrument will not be permanently affected.